



Patent pending

MADE IN AMERICA

Operations Manual

The intention of **MuteMagic** is to relieve you of the necessity to manually mute Commercial Breaks when viewing Real Time Television programs

MODES

MuteMagic supports two modes:

- Mode 1: Upper LED ON**
In Mode 1 all detected Commercial Breaks are muted, and no attempt to un-mute is made. Should you un-mute during the Break; no attempt at muting will take place until the next Break.
- Mode 2: Both LEDS ON**
All Commercial Breaks detected by **MuteMagic** will have their audio muted, and an attempt will be made to un-mute the audio when Program Material returns.
MuteMagic may restore the audio a little early, or a little late, but it will always restore the audio.
MuteMagic will not un-mute, unless it instigated the mute.
Manual muting and un-muting is completely unaffected.

DISABLING & ENABLING

It is strongly recommended that **MuteMagic** be **DISABLED** when viewing DVDs, Movies, and other programs that do not contain Commercial Breaks. Failure to do so may cause inadvertent muting, which will not make you a very happy camper.

Hold your Mute Button Down

After about 2 seconds, if the unit was enabled, it will change to disabled. If it was disabled, it will become enabled.

When **MuteMagic** is disabled, all LEDS will be off.

When **MuteMagic** is re-enabled, the last mode before disabling will be restored.

LED DIMMING

The LEDS will dim approximately 15 seconds after being altered

CHANGING MODES

Hold your Mute Button Down.

After about four seconds, the front panel LEDS will begin changing. For as long as you continue to hold the Mute button down, the unit will rotate around its two modes, displaying them as follows:

Mode 1	Upper LED On
Mode 2	Both LEDS On

When you reach the desired mode, release the Mute Button.

RE-ENTERING THE SETUP

Should you wish to re-enter the Setup Mode to reposition the IR Diode or Microphone, there is a method to accomplish this without removing power from the unit.

Hold your Mute Button Down for about 15 seconds. right through Enable/Disable and Mode Changing. Hold it until both LEDS flash rapidly. and then release the Mute Button.

In a couple of seconds, the upper LED will begin to flash, and the unit will be in the normal first time setup mode. *Refer to the First Time Setup Procedure.*

Note:

Should you get here by accident, do nothing during the 10-second flash time, and you will be right back where you were.

Disclaimer: MuteMagic is not 100 % reliable at detecting Commercial Breaks, and this should be understood prior to purchasing this product.

It may, however, amaze you with its accuracy.

www.mutemagic.com

All American Gadgets Inc.

Made in America